

DStv Remote Control codes - for HD PVR and 11xx

Key	TV1 XMP-1 ID S2059 (reg: 17479)
Power	0x0F
TV	0x50
Alt	0x51
Shift	----
TV Guide	0x27
Language	0x52
Mute	0x0C
I	0x8F
Exit	0x8E
TV1	----
TV2	----
A	----
B	----
TV 1	----
TV2	----
C	----
D	----
Up	0x8D
Left	0x8C
OK	0x8B
Right	0x88
Down	0x87
P +	0x86
P -	0x85
V -	0x84
V +	0x83
Red	0x40
Blue	0x41
White	0x42
Yellow	0x43
Green	0x44
Stop	0x30
Rewind	0x31
Play / Pause	0x32
Forward	0x33
Record	0x34
1	0x01
2	0x02
3	0x03
4	0x04
5	0x05
6	0x06
7	0x07
8	0x08
9	0x09
Menu	0x25
0	0x00
Help	0x53
Low Voltage ³⁾	0x54
Undefined Rotary Position ^{1) 2) 3)}	0x56

Key	TV1 XMP-1 ID S2059 (reg: 17479)
<Shift> Power	Standby relay
<Shift> TV (Audio)	0x58
<Shift> Alt (Subtitle)	0x59
<Shift> Shift	----
<Shift TV Guide> (ARC)	0x5A
<Shift> Language (PG)	0x5B
<Shift> Mute (RELAY)	----
<Shift> I	----
<Shift> Exit	----
TV1	----
TV2	----
A	----
B	----
TV 1	----
TV2	----
C	----
D	----
<Shift> Up	0x5F
<Shift> Left	0x60
<Shift> OK	0x61
<Shift> Right	0x62
<Shift> Down	0x63
<Shift> Vol + ¹⁾	----
<Shift> Vol - ¹⁾	----
<Shift> P -	0x66
<Shift> P +	0x67
<Shift> Red	0x71
<Shift> Blue	0x72
<Shift> White	0x73
<Shift> Yellow	0x74
<Shift> Green	0x75
<Shift> Stop	0x64
Rewind	----
Play / Pause	----
Forward	----
<Shift> Record	0x65
<Shift> 1	----
<Shift> 2	----
<Shift> 3	----
<Shift> 4	----
<Shift> 5	----
<Shift> 6	----
<Shift> 7	----
<Shift> 8	----
<Shift> 9	----
<Shift> Menu	0x6F
<Shift> 0	----
<Shift> Help	0x70
Low Voltage ²⁾	0x54
Undefined Rotary Position ²⁾	0x56